


SERIES 5100
TASKMASTER
SC5100

Installation Instructions
FOR MODELS 5155 THRU 51100

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING CONTROL.
BE SURE TO DE-ENERGIZE POWER SOURCE TO UNIT BEFORE INSTALLING CONTROL.

1. Disconnect heater from power supply.
2. Mount the controller in the control compartment as shown.
3. Refer to page 2 for wiring.

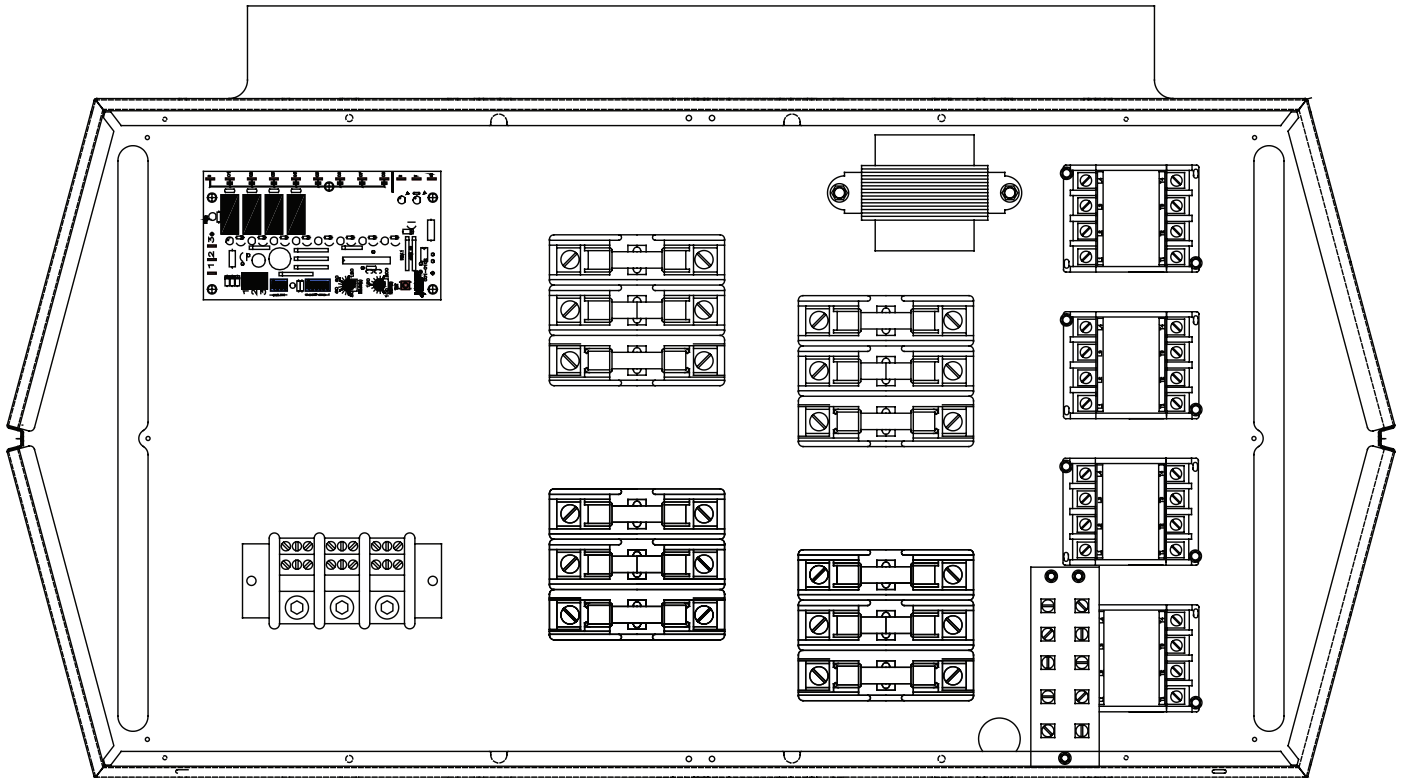

1. AFTER MOUNTING BOARD IN HEATER, PROCEED WITH WIRING AS SHOWN.
2. TERMINAL ARE IN REFERENCE TO THE TERMINAL BOARD LOCATED IN THE CONTROL COMPARTMENT.
3. REFER TO MANUFACTURERS MANUAL FOR THERMOSTAT, 0-10VDC OR 4-20mA SIGNAL CONNECTIONS AND SETTINGS. "DIP" SWITCHES MUST BE SET FOR INPUT AND STAGING. SEQUENCING OPERATION MUST ALWAYS BE LAST IN FIRST OUT(LIFO) WHICH IS THE FACTORY DEFAULT SETTING.
4. THE 5100 SERIES 55-75kW UNITS ARE CAPABLE OF 3 STAGES, THE 80-100kW ARE CAPABLE OF 4 STAGES.

