
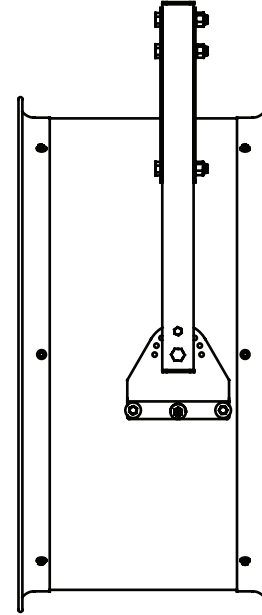


Industrial Air Circulator Instructions

For All High Velocity Fans

READ AND SAVE THESE IMPORTANT INSTRUCTIONS

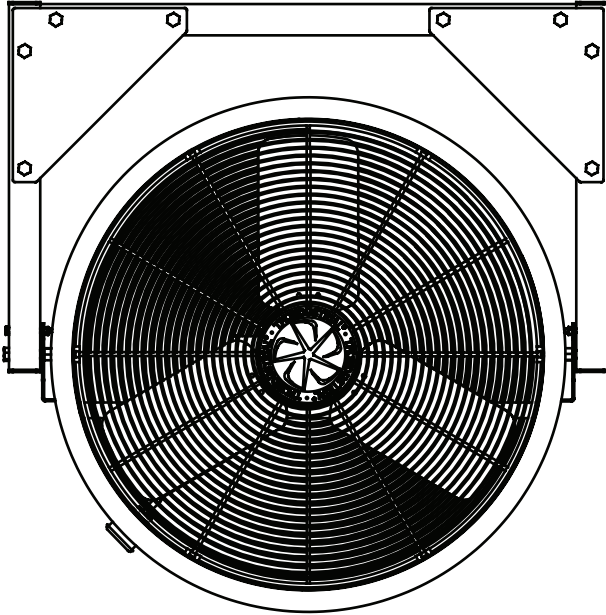

It is important that the following safety precautions be followed when using this product:

- DO NOT place foreign objects through guards into blades.
- DO NOT allow unit to become wet or damp.
- DO NOT use this fan with any solid state speed control device.

“NOT SUITABLE FOR USE WITH SOLID-STATE SPEED CONTROLS”

“AVERTISSEMENT; NE CONVIENT PAS A DES REGULATEURS DE VITESSE A SEMI-CONDUCTEURS”

- **WARNING:** To reduce the risk of fire, electrical shock, or injury to persons, observe the following:
- Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.
- Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- When cutting into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

Avertissement: Pour réduire les risques d'incendie ou de choc électrique, ou de blessures, respectez les consignes suivantes:

Utiliser cette unité uniquement de la manière prévue par le fabricant. Si vous avez des questions, contactez le fabricant. Avant de réparer ou nettoyer l'appareil, couper le courant au panneau de service et verrouiller à prevent sa remise en marche accidentelle. lorsque la moyenne de la déconnexion n'est pas bloquée, fixez solidement un avertissement bien en évidence, comme une étiquette sur le panneau de service. Les travaux d'installation et de câblage électrique doivent être effectués par des personnes qualifiées conformément à tous les codes et normes applicables, y compris la construction par incendie. Lorsque vous coupez dans le mur ou le plafond, n'endommagez pas le câblage électrique et d'autres utilitaires cachés. N'utilisez pas de pièces de rechange qui n'ont pas été recommandées par le fabricant.

INSTALLATION INSTRUCTIONS

For installation on wood structures, use a 1/2" lag screw of appropriate length for the application.


For installation on steel structures, use a 1/2" bolt of the appropriate length for the application, in combination with a flat washer, a lock washer and a 1/2" nut.

For installation on masonry structures, use a 1/2" lag screw, in combination with a lag shield, of appropriate length for the application.

In all cases, it is recommended that a flat washer be placed on both sides of the fan yoke to assist in smooth rotation.

For three-phase models, check fan blade rotation. Blade should rotate clockwise viewed from the air discharge side. To reverse rotation, reverse any two leads.

For dual-voltage models, it is possible to wire the same motor for different service voltages. Wiring diagrams are printed on the motor nameplates.

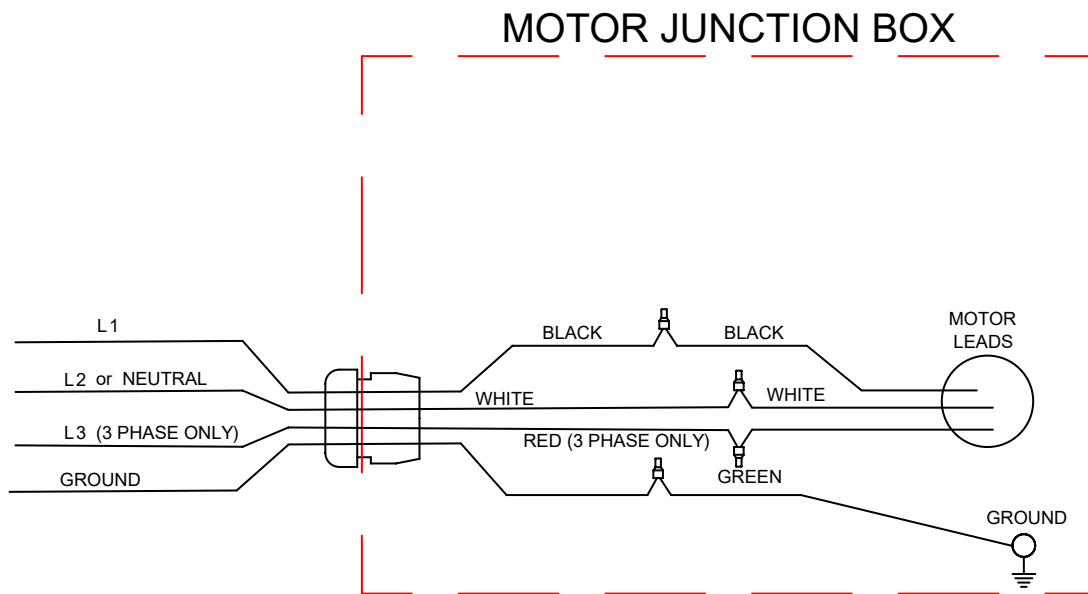

OPERATING INSTRUCTIONS

This unit is single speed fan and swivel bracket, which allows you to move the position to a desired air delivery. During normal operation it is not uncommon for the motor to be warm to the touch. The motor is equipped with a thermo-protector, and will automatically de-energize the fan if it were to over heat for any reason. If this should happen, immediately disconnect unit from power.

CLEANING/MAINTENANCE INSTRUCTIONS

All maintenance should be done by either TPI Corporation or a qualified electrician. The motor bearings are lubricated at the factory and should not require any additional lubrication. However, if bearing lubrication is required, apply a small amount of a synthetic oil to the motor bearing.

Remove six retaining screws and the six grille clips on the outer ring. Remove front guard out and off to separate from the housing. Use mild detergent to clean the blade and guards. Avoid allowing cleanser to come in contact with the motor windings or bearing. Then replace front guard in reverse order of disassembly. Allow fan to dry completely before next use.

Save these important instructions. Your TPI Air Circulator carries a one year warranty. For additional information on TPI Products or replacement parts, call TPI Customer Service Department at 1-800-251-0382 or write the address below.

PO. Box 4973 • Johnson City, Tennessee 37602-4973 • 423-477-4131 • FAX 423-477-0683