



# Industrial Air Circulator Instructions

For All Floor Fan Models

## READ AND SAVE THESE IMPORTANT INSTRUCTIONS

It is important that the following safety precautions be followed when using this product:

- ALWAYS unplug unit for cleaning or maintenance.
- ALWAYS unplug unit when not in use.
- ALWAYS unplug when moving unit from one location to the next.
- DO NOT use an extension cord. Plug fan into a properly rated electrical outlet.
- DO NOT place foreign objects through guards into blades.
- DO NOT allow unit to become wet or damp.
- DO NOT operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- DO NOT run cord under carpeting.
- DO NOT cover cord with throw rugs, runners, or similar coverings.
- DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

**WARNING:** To avoid risk of fire or electrical shock, **DO NOT** use this fan with any solid state speed control device. "NOT SUITABLE FOR USE WITH SOLID-STATE SPEED CONTROLS"

"AVERTISSEMENT; NE CONVIENT PAS A DES REGULATEURS DE VITESSE A SEMI-CONDUCTEURS"

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**Attention:** Pour eviter tout risque d'incendie ou de choc electrique, ne pas utiliser ce ventilateur avec un dispositif de controle vitesse a etat solide. Cet appareil n'est pas destine a etre utilise par des personnes (enfants compris) dont les capacites physiques, sensorielles ou mentales, ou le manque d'experience et de connaissances, a moins qu'ils n'aient ete donnes supervision ou des instructions quant a l'appareil par une personne responsable de leur securite. Si le cordon d'alimentation est endommage, il doit etre remplace par le fabricant, son agent de service ou une personne qualifiee afin d'eviter un danger.

**WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING: Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

AVERTISSEMENT : POUR RÉDUIRE LE RISQUE D'INCENDIE, D'ÉLECTROCUTION OU DE BLESSURE AUX PERSONNES, OBSERVEZ CE QUI SUIT : N'utilisez pas de pièces de rechange qui n'ont pas été recommandées par le fabricant.

### OPERATING INSTRUCTIONS

This unit is equipped with a three (3) speed selector switch, which allows you to select a desired amount of air delivery. This portable TPI Air Circulator can be used as a hassock fan to pick cool air from the floor and circulate it through an area. TPI Air Circulators can be used alone or in conjunction with an air conditioner to circulate and force cooled air into other areas. During normal operation it is not uncommon for the motor to be warm to the touch. The motor is equipped with a thermo-protector and will automatically de-energize the fan if it were to over heat for any reason. If this should happen immediately disconnect unit from power outlet.

### CLEANING / MAINTENANCE INSTRUCTIONS

All maintenance should be done by either TPI Corporation or a qualified electrician. The motor bearings are lubricated at the factory and should not require any additional lubrication. However, if bearing lubrication is required, apply a small amount of a synthetic oil to the motor bearing. Remove two retaining screws and open the six guard clips on the flange. Lift front guard up and off to separate the two halves. Use a mild detergent to clean the blade and guards. Avoid allowing cleanser to come in contact with the motor windings or bearings. Then replace front guard in reverse order of disassembly. Allow fan to completely dry before next use.

Save these important instructions. Your TPI Air Circulator carries a one year warranty. For additional information on TPI Products or replacement parts, call TPI Customer Service Department at 1-800-251-0382 or write the address below.

P.O. Box 4973 \* Johnson City, Tennessee 37602-4973 \* 423-477-4131 \* Fax 423-477-0683

FORM: 9889  
ECO1-8027